


Quick Operation Manual

BRG1E73 – Navigation Remote Controller

Button Locations and Descriptions

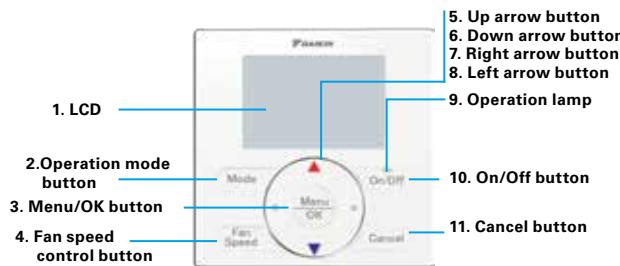

1. LCD (with backlight)

- » LCD backlight illumination lasts approximately 30 seconds after pressing any button.
- » If two remote controllers are used to control a single indoor unit, only the controller used first will have backlight functionality.

2. Operation mode selector button

- » Press to select operation mode (Cool/Heat/Fan/Auto/Dry).
- » If the display shows the icon, heat or cool mode will not be available for selection.

3. Menu/OK button

- » Press to display main menu. Navigate to desired menu item and press to select item.

4. Fan speed control button

- » Press to select preferred fan speed.

5. Up arrow button

- » Press to raise setpoint.
- » Press to navigate up.

6. Down arrow button

- » Press to lower setpoint.
- » Press to navigate down.

7. Right arrow button

- » Press to navigate right.

8. Left arrow button

- » Press to navigate left.

9. Operation lamp

- » Lamp illuminates solid green when unit is ON and operating normally.
- » Lamp flashes green when an operation error occurs.

10. On/Off button

- » Press to turn unit ON or OFF.

11. Cancel button

- » Press to cancel selection and return to the previous screen

Main Menu

- *Airflow Direction
- *Individual Airflow Direction
- *Ventilation
- Schedule
- Off Timer
- Celsius / Fahrenheit
- Filter Auto Clean
- Maintenance Information
- Configuration
- Current Settings
- Clock & Calendar
- Daylight Saving Time
- Language


*Depending on connected model

Screen Display Modes and Descriptions

Set the screen display mode from: **Main Menu-Configuration-Display-Display Mode**. Three screen display modes are available: Standard, Detailed, and Simple. Standard display is set by default.


A. Standard

Standard screen mode display items.

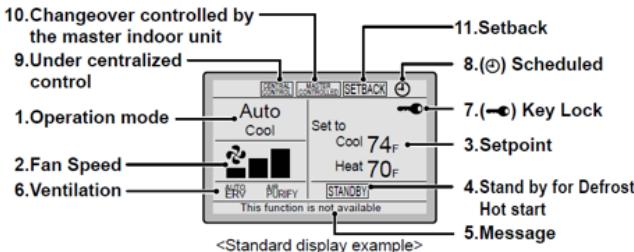


B. Detailed

Detailed screen display mode includes airflow direction, current day/time, selectable display items.

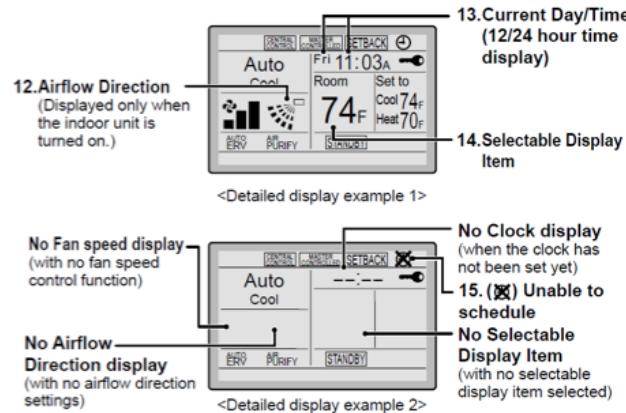

C. Simple

Simple screen display mode only shows primary function items.

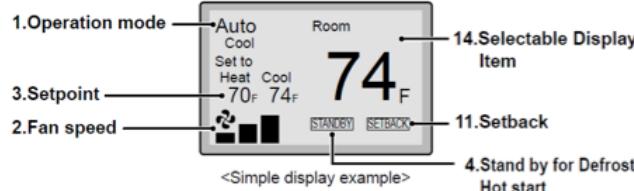

Screen Items Descriptions

1. Operation Mode

- » Displays current operation mode: Cool, Heat, Vent, Fan, Dry or Auto. In Auto mode, the current operation mode (Cool or Heat) is also displayed.

2. Fan Speed

- » Displays the current fan speed. (Note: Some units do not include fan speed control or display fan speed.)

3. Setpoint

- » Displays the setpoint of the indoor unit.
- » Go to Menu > Celsius/Fahrenheit to select the temperature unit (°C or °F).

4. Standby for Defrost/Hot start

- » Displays "STANDBY" notice when in defrost or hot start status.

5. Message

- » Displays warning and error messages.

6. Ventilation

- » Displays when unit is connected to an Energy Recovery Ventilator (ERV). Ventilation Mode icon AUTO-ERV, ERV, and BYPASS indicate the current ventilation mode for the ERV unit.
- » Air purify icon AIR PURIFY indicates that the air purifying unit (optional) is operating.

7. Key Lock

- » Displays the button lock icon when set.

8. Scheduled

- » Displays when the Schedule or OFF timer is enabled.

9. Under Centralized control

- » Displays when unit is controlled by a multi-zone controller (optional), and unit operation through the remote controller is limited.

10. Changeover Controlled by the Master Indoor Unit

- » Displays when the connected unit does not have the authority to change the operation mode between cooling and heating.

11. Setback

- » Setback icon flashes when unit is turned ON by the setback control.

12. Airflow Direction

- » Displays the airflow direction/swing status. This item only displays if connected unit features oscillating louvers.

13. Current Day/Time (12/24 Hour Time Display)

- » Displays the current time setting. If clock is not set, "-- : --" is displayed.
- » Go to Main Menu > Clock & Calendar to set 12 or 24 hour display option.

14. Selectable Display Item

- » Room temperature is selected by default. Go to Menu > Configuration > Display > Display item to select display item.

15. Unable to Schedule

- » Displays when clock is not set. (Note: The schedule function requires the clock to be set.)